



Overview

The L5 Optical Adaptors are designed to be used in cases where a L5 Direct Read Cable is not convenient or available. This allows them to be used for multiple communication or deployment purposes. The Adaptor can be used to connect your Levellogger to a Levellogger 5App Interface, Solinst Readout Unit (SRU), DataGrabber 5, PC Interface Cable, an SDI-12 Interface Cable, or deploy a Barologger inside an STS Telemetry enclosure or from a LevelSender.

The L5 Slip Fit Adaptor is also available for a quick, temporary connection to the Levellogger. It is not recommended for long-term installations, such as the SDI-12 Interface Cable, STS or LevelSender. The L5 Threaded Adaptor is suitable in these cases.



L5 Threaded Adaptor



L5 Slip Fit Adaptor

[GET QUOTE >](#)

